



Instruction Booklet 使用說明



25MM TOURMALINE CERAMIC STRAIGHTENER 25毫米電氣石陶瓷直髮器

VS2010PIH



沙宣25毫米電氣石陶瓷直髮器

此款沙宣25毫米電氣石陶瓷直髮器可加熱至攝氏230度，不但能快速直髮，它的弧形機身設計更可塑造鬆髮效果。它具有陶瓷電氣石納米銀浮板，打造順暢直髮效果。而它的多重電壓方便您在世界各地也能使用。

重要安全指示

當使用電器時，尤其有小童在場，應小心及遵守以下安全指示：

使用前請細閱使用說明 電器應遠離水源


安全預防措施

警告：包裝或產品上使用的膠袋可能有危險，請擺放在嬰兒及兒童拿不到的位置。請勿於嬰兒床、睡床、嬰兒車或兒童遊樂園內使用。膠袋的薄層可能會堵塞鼻子及口腔，阻礙呼吸。此膠袋不是玩具。

警告：不要在盛水的浴缸、淋浴缸、洗臉盆或其他器皿附近使用本器具。

- 當電器在浴室使用後，應立即拔除插頭，因為電器接近水會導致危險，即使開關已關掉。為提供額外的安全性保護，建議閣下在提供浴室電源的電路中安置不超過30毫安培(mA)的漏電斷路掣(RCD)；如有疑問，請向負責安裝的電機工程師查詢。
- 切勿把電器放入或掉進水或其他液體中。
- 如果電源線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
- 若電器曾跌落或有任何不妥，請馬上停止使用。
- 切勿將已接上電源或開啟的電器置之不理。
- 如若在使用中有任何不妥，請馬上拔去插頭。
- 請不要使用非本產品提供的任何配件。
- 每次用完後或清潔前請先拔去插頭。
- 切勿將電器發熱的部份碰到身體，尤其是眼睛、耳朵、面部和頸部。
- 本產品不該讓有智障、殘障，感官有缺陷或缺乏使用電器經驗與常識的人（包括兒童）單獨使用，而應由有經驗及常識之監管人監察及指導下使用此產品。小孩子應被監管以保證他們不會將此產品當成玩具。
- 待電器冷卻之後才收藏。
- 為避免損壞電源線，收藏時切勿將電源線纏繞在電器上並確保其不被拉扯、扭曲或屈折。
- 使用前請先閱讀本使用說明中有關環球電壓的資料。
- 請勿配合變壓器使用。

產品特點

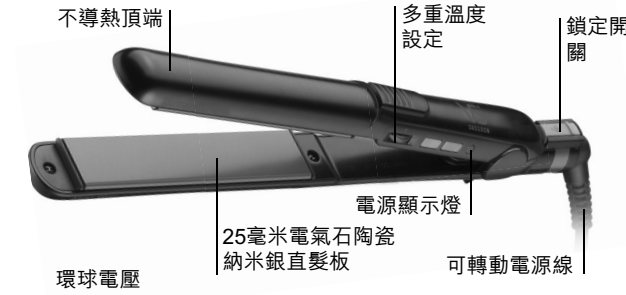

操作指示

此直髮器適合家居使用，適用電壓為100-240伏特交流電。切記只可以交流電（50/60赫茲）操作。

環球電壓

此直髮器會自動調校至合適輸入電壓。如需要，請在插座上轉接合適的配接插頭。

如何使用您的直髮器

只適用於乾髮上

- 拆除所有包裝和銷售標籤後方可使用。
- 如往常一樣清洗和修護秀髮。確保秀髮乾爽，梳順打結秀髮。
- 插頭上的保護膠蓋用以保護插頭。使用前先取下膠蓋，然後插入電源插座。
- 將插頭插入到一個合適的電源插座，然後按下 (I) 按鈕。紅色指示燈會亮起並開始閃爍。
- 使用溫度轉盤選擇所需的溫度。請參閱「如何使用多重溫度設定」以獲取更多訊息。
- 讓直髮器加熱，當直髮器加熱至選定的溫度時，紅色指示燈會停止閃爍。您的直髮器現在可以使用。
- 要關閉直髮器，按下關閉 (O) 按鈕，紅色指示燈將熄滅。從電源插座上拔去插頭，待直髮器降溫後才可收存。

重要事項：

如秀髮經過嚴重漂染或化學處理，只適合使用本產品的低熱設定。如果您對您頭髮的狀態有任何疑慮，請諮詢髮型師有關直髮器的使用。

如何使用多重溫度設定

多重溫度設定為不同性質的秀髮提供許多溫度選擇。這些設定讓您可根據特定需要和髮質而選擇所需的溫度設定。
注：您選擇的溫度不同，加熱時間亦會有所不同。首次使用本產品時，建議使用低熱的設定。
警告：本產品適合使用平均攝氏200度(溫度調控指標為15至20)的中高熱力設定，經過化學處理、漂染或損壞的頭髮，不適合攝氏215至230度(溫度調控指標為20至25)的最高溫度設定。

溫度調控指標	髮質
1-5	纖幼、細軟、漂染頭髮
5-10	平均較厚、經化學處理頭髮
10-15	濃厚或彎曲頭髮
15-20	很難拉直、濃密頭髮
20-25	很難拉直、非常濃密及彎曲頭髮

如何使用鎖定開關？

鎖定開關是用來令上下直髮板緊閉，方便直髮器在不使用時方便儲存。使用完直髮器後，請關機並待機身降溫。握住直髮板在一起，再滑動鎖定開關，以整固直髮板。要解除鎖定，只需將鎖定開關向另一個方向滑動。

安全自動關機系統

本產品具有安全自動關機系統，如果不小心將接通的直髮器留下了，72分鐘後它會自動關機。如果發生這種情況，請等待直髮器冷卻，將其關機並拔掉電源線。插上電源線和開啟直髮器開關。

什麼是陶瓷電氣石納米銀技術？

陶瓷電氣石納米銀技術的微粒遇熱時能結合納米銀、電氣石和陶瓷，有助修復頭髮角質層，從而減少毛躁和增強光澤。

保養

本直髮器無需保養，亦無需使用潤滑劑。請避免讓污物或塵埃堵塞器具上的孔。如需清潔機身，請先拔掉電源插頭並待機身降溫，然後用布塊擦拭機身外表。如發生任何異常現象，請立即拔出電源插頭並待機身降溫，然後交給授權沙宣維修中心修理。用戶切勿自行維修本直髮器。

為保持直髮器的最佳表現，請注意下列保養須知：

- 切勿讓尖銳物件接觸板面，或用粗糙物料磨擦板面。
- 切勿與強力化學品一併使用，如電髮水。
- 切勿使用強力清潔劑清潔板面；一般情況下，溫和清潔劑已可輕易清除污漬及殘留的髮型用品。

小心

切勿拉扯、扭曲或過度彎曲電線。切勿將電線纏繞在機身上，否則容易損壞接入機身的可轉動部位，導致電線破裂或短路。如發現直髮器破損、停止或間歇性停止操作，請立即停用。

收存

不使用本直髮器時，可待機身降溫後，將其收存於安全、乾燥及遠離兒童的地方。切勿以拉扯電線的方式拔出插頭；切勿將電線纏繞在機身上。要確保電線的接入機身部分垂直，其餘部分自然放置即可。

電線系統

總電線的顏色分別根據其性質而定：

- 藍色代表中線
- 啡色代表火線

由於電器的總電線顏色和插頭的電路接頭顏色可能不相符，故如要拆除插頭，必須依照以下重新裝配操作說明：

- 藍色的電線應和電路接頭“N”接駁。
- 啡色的電線應和電路接頭“L”接駁。
- 切勿將以上任何一條電線接駁在電路接頭的地線“E”或⊕插頭上。

此電器使用十三安培電插頭時，請採用五安培的保險絲。若使用其他電插頭，請採用五安培的保險絲。

兩年保養期限

在您購買日期起兩年內，並在正常情況下，如產品的品質或零件有任何不妥之處，沙宣顧客服務中心將會為您免費提供維修或換貨服務。如需獲得此保用服務，只需保留正本收據，倘若產品於保養期內有任何問題，可蒞臨您所在地區的顧客服務中心處理。注意：是項保養不包括一切因錯誤使用、不依指示處理產品及意外損毀、遺失零件及經自行改造的產品。

保用期之後

請致電使用說明中所列出的您所在地區的沙宣顧客服務中心，查詢維修服務詳情，或是電郵至email_asia@conair.com，附上您的名字，電話號碼和電郵地址，還有產品不妥善之詳情。

如欲了解更多，請登入



VS SASSOON SERVICE CENTRE

Manufacturer: Conair Far East Ltd
Address: 35/F., Standard Chartered Tower, Millennium City,
388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong.
Tel: (852) 2751 4604

沙宣顧客服務中心

製造商：美康雅遠東有限公司
地址：香港九龍觀塘碧塘道388號創紀之城渣打中心35樓
電話：(852) 2751 4604

www.toolsofsassoon.com

SOLE DISTRIBUTED BY: 經銷商：

Philippines 菲律賓
Rustan Marketing Corporation
3rd Floor, 403 Midland Building,
Senator Gil Puyat Ave., Makati City, Philippines
Tel: (632) 890 9703 Fax: (632) 890 4838

Malaysia 馬來西亞
Innovest Marketing Sdn. Bhd.
Lot 2208, Jalan Kusta, Kampung Jaya Industrial Area, 4700 Sungai Buloh,
Selangor D.E. Malaysia
Tel: 603 6141 3598

Singapore 新加坡
Massmark International Pte Ltd
80 Genting Lane #08-01/05
(*Drive in through 35 Tannery Road)
Ruby Industrial Complex, Genting Block
Singapore 349565
Tel: 65-6747 1102 Fax: 65-6747 8997

Thailand 泰國
Central Trading Co., Ltd. (Central Marketing Group)
3388/25-37, 51-53 and 82-85 Sirinrat Building 8-11,
15 and 23rd Floor Rama 4 Rd.,
Klong-ton, Klong-toey, Bangkok 10110. Thailand
Tel: (66) 2 229 7000 Fax: (66) 2 367 5516

Indonesia 印尼
CV. Paten
Komplek Puri Deltamas Blok C No. 28
Jl. Bandengan Selatan 43,
Jakarta Utara 14450 - Indonesia
Phone: (021) - 6693420, 6693478
Fax: (021) - 6693511

Vidal Sassoon and related logos are trademarks of
The Procter & Gamble Company used under license by Conair Corporation.
維達沙宣及其有關標誌乃寶潔有限公司擁有，授權予美商美康雅公司使用。

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	04/19/2016
Customer	VS-HK
Model No.	VS2010PIH
Description	IB
Job No.	16VS122
Reference No.	IB-11/045C
Revision No.	1
Color	1C+1C(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty bai
Approved by	Jimmy Ng/Patrick Yu
Vendor	MILLPLAN
Supplier	

折疊方法
Folding method:
12 pages (6 x 2)



VS2010PIH

IB-11/045D

VS SASSOON 25MM TOURMALINE CERAMIC STRAIGHTENER

The VS SASSOON 25MM tourmaline ceramic straightener heats up to 230°C for fast straightening with surround heat designed for creating curls.

It features ceramic tourmaline nano silver floating plates for smooth results and it's multi voltage so you can take it with you all over the world.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.


Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
- Never immerse the unit in water or any other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the unit if it has fallen or if it appears to be damaged.
- Do not leave the unit unattended when it is plugged in or switched on.
- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by manufacturer.
- Unplug the unit after each use and before cleaning it.
- Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
- This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
- Allow the unit to cool before storing.

- To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
- Before plugging in, read the information about worldwide voltage contained in the operating instructions section of this manual.
- Do not use with a voltage converter.

FEATURES

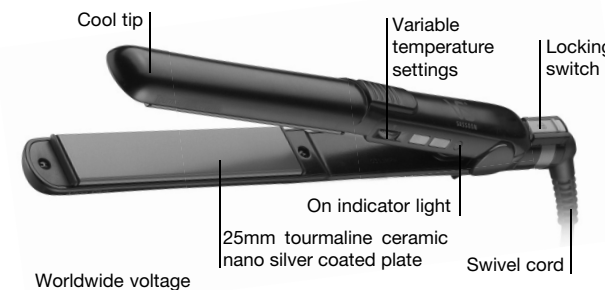

OPERATING INSTRUCTIONS

This straightening iron appliance is intended for household use. This unit is designed to operate at 100–240 volts AC. Use on Alternating Current (50/60 hertz) only.

WORLDWIDE VOLTAGE

This straightening iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration, prior to use in outlet.

HOW TO USE YOUR STRAIGHTENER

For use on dry hair only.

- Remove all packaging and sale labels before use.
- Wash and condition your hair as usual. Ensure that hair is dry, combed through and tangle-free.
- A plastic cover has been placed over the plug to protect it from damage. Remove the plastic cover before inserting into power outlet.
- Plug the appliance into a suitable power outlet and press the on (I) button. The red indicator light will turn on and start to flash.
- Select the desired temperature using the temperature dial. Please see 'How to use the variable temperature settings' for more information.
- Allow the straightener to heat up, the red light will stop flashing when the unit has heated up to the selected temperature. Your straightener is now ready to use.
- To turn appliance off, press the off (O) button and the red indicator light will turn off. Unplug the appliance from the power outlet and allow to cool before storing.

IMPORTANT:

Hair that has been heavily bleached or chemically treated should only use the low heat settings on this product. Please consult your hairdresser on using heated appliances if you have any concerns about the condition of your hair.

HOW TO USE THE VARIABLE TEMPERATURE SETTINGS

The variable temperature settings provide variable heat for many different hair types. These settings allow you to choose the required temperature setting according to your particular need and hair type. NB: The heat-up time will vary depending on which temperature setting you select. It is suggested to use the lower heat settings when using the appliance for the first time.

WARNING: This appliance is suitable for average use on the medium high heat setting of 200°C (Temp. Setting index mark as 15-20). The 215°C and 230°C (Temp. Setting index mark as 20-25) maximum high heat settings are not suitable for hair that has been chemically treated, bleached or damaged.

Temp. Control Setting	Hair Type
1-5	Delicate, fine, bleached hair
5-10	Average to thick, treated hair
10-15	Thick or wavy hair
15-20	Hard to straighten, thick hair
20-25	Hard to straighten, very thick curly hair

HOW TO USE THE LOCKING SWITCH?

The locking switch is used to hold the plates together when the straightener is not in use for easy and convenient storage. After use, turn the appliance off and allow to cool. Hold the straightener handle together and slide the locking switch across to secure the plates. To unlock, simply slide the locking switch in the other direction.

AUTOMATIC SAFETY CUT OFF SYSTEM

This appliance has an automatic safety cut off system which will automatically turn the appliance off if left on accidentally for 72 minutes. If this occurs, please wait for appliance to cool. Switch the appliance off and unplug the power cord. Plug the power cord in and switch the appliance on.

WHAT IS CERAMIC TOURMALINE NANO SILVER TECHNOLOGY?

Ceramic tourmaline nano silver technology unites micro particles of nano silver, tourmaline and ceramic when combined with heat seals the hair cuticle to leave hair with reduced frizz and enhanced shine.

MAINTENANCE

Your straightening iron is virtually maintenance-free. No lubrication is needed. Keep all openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

However, in order to keep the best performance from your straightening iron all the time, please note the following care instructions.

- Do not scratch the surface of the plates with sharp objects or wipe with coarse material.
- Do not use this straightening iron with strong chemicals, like

perm lotions.

- Do not clean the plates with strong cleaning agents. In most cases, mild detergent will be able to remove any stains or traces of styling products left on the plates easily.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter 'N'.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter 'L'.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the ⊕ symbol.

With this appliance, if a 13 amp plug is used a 5 amp fuse should be fitted. If any other type of plug is used a 5 amp fuse must be fitted either in the plug or at the distribution board.

LIMITED TWO YEAR WARRANTY

This styler can be repaired or replaced free of charge for 2 years from the date of purchase if the styler is defective in workmanship or materials. This warranty is no longer valid in case of alteration or repair by any unauthorised persons. To obtain service under this warranty, please keep the original purchase receipt for warranty service, and you can bring the styler to our customer service center for repair during the warranty period.

OUT OF GUARANTEE

Call VS Sassoon Service Centre in your region as listed in this Instruction Booklet for details of repair service. Or email to us at email_asia@conair.com with your name, contact telephone number

and email address and details of the fault.

For more information, please visit

