



## Instruction Booklet 使用說明



### 1800W DUAL IONIC SHINE CERAMIC COMPACT DRYER 1800瓦特雙重負離子 陶瓷輕巧風筒

VS25383SH

## 沙宣1800瓦特雙重負離子陶瓷輕巧風筒

### 負離子深層修護

現代都市的空氣充滿帶有正電的煙霧及塵垢等的空氣污染物，這些都是令秀髮暗啞脆弱的元兇。

沙宣1800瓦特雙重負離子陶瓷輕巧風筒釋放出雙倍負離子，提供全面覆蓋，有效中和正離子，徹底清除污染物，潔淨修護秀髮，順滑及強化髮絲鱗狀表層，令秀髮回復貼服柔順，煥發健康光澤。另外，負離子能打散水份子變成更微細粒子，水份更容易滲入髮絲，深層滋潤髮絲內外表層，令秀髮更健康，更水盈亮澤。

### 陶瓷滋養護髮

另外，風筒的出風口採用具修護作用的陶瓷面物料，加強護髮功效。陶瓷傳熱更均勻快捷，避免如一般風筒會產生燙壞頭髮的過熱點；受熱後更會釋出修護補濕秀髮的負離子，有效避免細菌滋生並促進秀髮健康。使用此風筒可減少散亂髮絲，為您帶來絲般亮澤的健康秀髮。

### 重要安全指示

當使用電器時，尤其有小童在場，應小心及遵守以下安全指示：

### 使用前請細閱使用說明

### 電器應遠離水源

### 安全預防措施

**警告：**包裝或產品上使用的膠袋可能有危險，請擺放在嬰兒及兒童拿不到的位置。請勿於嬰兒床、睡床、嬰兒車或兒童遊樂園內使用。膠袋的薄層可能會堵塞鼻子及口腔，阻礙呼吸。此膠袋不是玩具。

**警告：**切勿在浴缸、花灑、臉盆或其他裝有水的容器附近使用此產品。

- 當風筒在浴室使用後，應立即拔除插頭，因為風筒接近水會導致危險，即使開關已關掉。為提供額外的安全性保護，建議閣下在提供浴室電源的電路中安置不超過30毫安培(mA)的漏電斷路掣(RCD)；如有疑問，請向負責安裝的電機工程師查詢。
- 切勿把電器放入或掉進水或其他液體中。
- 如果電源線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
- 切勿堵塞電器的入風口，及放在柔軟表面上如床或梳化，因有機會堵塞入風口。請避免入風口受纖維、頭髮等碎屑堵塞。這個產品已配備了溫度斷路器。如果設備過熱，它會自動關閉或停止加熱。如果發生這種情況，請把開關關閉及拔去電源，讓產品冷卻10分鐘。再次使用前，請確保沒有任何其他污垢或頭髮在後方過濾網上。插上插頭和開機。如果它再次過熱，應立即停止使用，關掉電源並拔下插頭。交回沙宣服務中心檢查及維修。
- 若電器曾跌落地或有任何不妥，請馬上停止使用。
- 切勿將已接上電源或開啟的電器置之不理。
- 如若在使用中有任何不妥，請馬上拔去插頭。
- 請不要使用非本產品提供的任何配件。
- 每次用完後或清潔前請先拔去插頭。
- 切勿將電器發熱的部份碰到身體，尤其是眼睛、耳朵、面部和

頸部。

- 本產品不該讓身體、感官或精神能力有缺陷或缺乏使用電器經驗與常識的人（包括兒童）單獨使用，而應由有經驗及常識之監管人監察及指導下使用此產品。小孩子應被監管以保證他們不會將此產品當成玩具。
- 待電器冷卻之後才收藏。
- 為避免損壞電源線，收藏時切勿將電源線纏繞在電器上並確保其不被拉扯、扭曲或屈折。

### 使用方法

### 負離子及陶瓷修護功能

現代都市生活常接觸的環境或物料如冷氣場所、人造纖維及污染物等，均會產生靜電；即使日常梳髮及用毛巾抹濕髮亦會產生靜電。這些靜電會令髮絲的鱗狀表層互相排斥，髮絲表面因而出現凹凸不平，而髮絲不夠貼服平滑。髮色亦顯暗啞，失去健康光澤；靜電亦會令頭髮飛散，有礙造型。而雙重負離子裝置所產生的負離子，提供全面徹底覆蓋，有效中和靜電，令髮絲鱗狀表層貼服，秀髮回復順滑光澤。另外，負離子能打散水份子變成更微細粒子，水份更容易滲入髮絲，深層滋潤髮絲內外表層，令秀髮更健康，更有朝氣。另外，陶瓷面出風口避免過熱點的產生及有助避免細菌滋生，加倍護髮。

### 美髮造型貼士

要塑造完美髮型，先要擁有剪裁合度的髮型及作適當護理，請採用優質的洗髮水、護髮素及美髮護理產品護理秀髮。

### 吹髮基本技巧

- 用洗髮水洗髮並塗上護髮素，再徹底沖洗。用毛巾抹乾多餘水份。將頭髮分為數部份，用髮梳一邊梳髮，一邊用風筒吹塑頭髮。風筒應均勻吹過每部份頭髮，以讓熱風均勻吹過髮絲。風筒熱風應吹向頭髮，而非頭皮。
- 吹髮時確保入風口並無阻擋及無頭髮堵塞。
- 為免過度吹乾頭髮，切勿只集中吹乾一部份頭髮。吹塑髮型時風筒保持移動。
- 在下次洗髮前欲吹塑髮型，在頭髮上噴上水以濕潤頭髮，才用風筒吹塑。
- 吹塑波浪曲髮時，用暖風吹髮至近乾透，再用冷風吹髮，以平服髮絲鱗狀表層及固定髮型。

### 塑造豐盈質感

要增加髮型豐盈感，低頭並將風筒熱風吹向髮根以增加髮根彈力。吹乾頭髮後，將頭髮撥向後面再梳理。

### 吹塑亮麗直髮

將頭髮分為數份，用大圓捲髮梳（大約直徑2吋）拉緊每份頭髮，並將髮尾向內捲吹塑。

### 塑造波浪曲髮

塑造自然波浪曲髮非常輕易，只需在吹髮時用手指撥弄髮根便可。

### 產品特點

- 功率**  
強力1800瓦特
- 2段熱力/風速選擇**  
安全控制熱力

- 冷風選擇**  
固定髮型
- 集風嘴**  
吹髮造型得心應手
- 摺疊式手柄**  
方便收存
- 單揭式入風網**  
方便清潔
- 雙重負離子**  
令秀髮煥發健康亮澤
- 陶瓷面出風口**  
熱風熱力均勻分佈，有效護髮

### 認識您的風筒 – 雙重負離子風筒



### 使用者保養指示

您的風筒基本上毋須特別保養，毋須加潤滑油。為保持風筒操作正常，必須保持風筒清潔。堵塞的入風口會引致風筒過熱。如需要清潔，拔去插頭，用小刷或吸塵機的刷掃去入風口的塵垢纖維。只可用微濕抹布淨風筒外殼。

若風筒過熱，自動安全裝置會自動關掉風筒以避免損壞或引致損傷。若風筒開機，拔去插頭，再使用前讓風筒冷卻10至15分鐘。請確保通風口並無碎屑堵塞。

### 警告

切勿拉扯、扭曲、或嚴重摺曲電源線。切勿將電源線圍繞風筒。這會引致電源線連接口斷裂並引致短路。請經常檢查電源線有否損壞。若電器損壞或間歇性開機，請立即停止使用。若電源線或風筒損壞或不正常操作，請交到沙宣顧客服務中心檢查及維修。切勿自行維修電器。

### 收存指示

非使用風筒時，拔去插頭並收存在安全、乾爽、遠離兒童的地方。切勿將電源線圍繞風筒。

### 電線系統

總電線的顏色根據其性質而定：

藍色代表中線  
啡色代表火線

由於電器的總電線顏色和插頭的電路接頭顏色可能不相符，故如要拆除插頭必須依照以下重新裝配操作說明：

- 藍色的電線應和電路接頭“N”接駁。
- 啡色的電線應和電路接頭“L”接駁。
- 切勿將以上任何一條電線駁在電路接頭的地線“E”或 ⊕ 插頭上。

此電線使用十三安培電插頭時，請採用十三安培的保險絲。若使用其他電插頭，請採用十三安培保險絲。

### 兩年保養期限

在您購買日期起兩年內，並在正常情況下，如產品的品質或零件有任何不妥之處，沙宣顧客服務中心將會為您免費提供維修或換貨服務。如需獲得此保用服務，只需保留正本收據，倘若產品於保養期內有任何問題，可蒞臨您所在地區的顧客服務中心處理。注意：是項保養不包括一切因錯誤使用、不依指示處理產品及意外損毀、遺失零件及經自行改造的產品。

### 保用期之後

請致電使用說明中所列出的您所在地區的沙宣顧客服務中心，諮詢維修服務詳情，或是電郵至email\_asia@conair.com，附上您的名字，電話號碼和電郵地址，還有產品不妥善之詳情。

如欲了解更多，請登入



在使用前，請先通過二維碼獲取電子說明書，以免遺失紙質說明書而無法獲取產品資訊。

## CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	05/14/21
Customer	VS-HK
Model No.	VS25383SH
Description	IB
Job No.	
Reference No.	IB-11/260G
Revision No.	0
Color	1C (BLACK) + 1C (BLACK)
Open Size	552mm(W) x 214mm(H)
Folded Size	92W) x 214(H) / mm
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Ken Xiong/Sofi Yip
Vendor	SILVERPLAN
Supplier	

### VS SASSOON SERVICE CENTRE

Manufacturer: Continental Conair Limited  
Address: 35/F., Standard Chartered Tower, Millennium City,  
388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong.  
Tel: (852) 2751 4604

### 沙宣顧客服務中心

製造商：美康雅有限公司  
地址：香港九龍觀塘觀塘道388號創紀之城渣打中心35樓  
電話：(852) 2751 4604

www.toolsfossassoon.com

### DISTRIBUTED BY:

### 經銷商:

Philippines 菲律賓  
Rustan Marketing Corporation  
3rd Floor, 403 Midland Building,  
Senator Gil Puyat Ave., Makati City, Philippines  
Tel: (632) 890 9703 Fax: (632) 890 4838

Malaysia 馬來西亞  
Innovest Marketing Sdn. Bhd.  
Lot 2208, Jalan Kusta, Kampung Jaya Industrial Area,  
47000 Sungai Buloh, Selangor D.E., Malaysia  
Tel: 603 6141 3598

Singapore 新加坡  
Massmark International Pte Ltd  
80 Genting Lane #08-01/05  
(\*Drive in through 35 Tannery Road)  
Ruby Industrial Complex, Genting Block  
Singapore 349565  
Tel: 65-6747 1102 Fax: 65-6747 8997

Indonesia 印尼  
PT. Autoaccindo Jaya  
JL.Cideng Barat No.7,  
Jakarta 10140, Indonesia  
Phone: + 6221 6332730  
Fax: + 6221 6322886

Certain trademarks used under license from The Procter & Gamble Company or its affiliates.  
維達沙宣及其有關標誌乃寶潔有限公司擁有，授權予美商美康雅公司及其關係企業使用。

VS25383SH

IB-11/260G

折疊方法  
Folding method:  
12 pages (6 x 2)





## VS SASSOON 1800W DUAL IONIC SHINE CERAMIC COMPACT DRYER

### IONIC CONDITIONING

The air most of us live in today carries positive ions that maintain smoke, dust and airborne particles found in air pollution. They leave the hair looking dull and brittle. The VS Sassoon Dual Ion Shine Ceramic 1800W Compact Dryer generates double negative ions to neutralize the positive ions, providing a full and complete coverage. Your hair is purified and deeply revitalised. The outer cuticle layer is fortified and smoothened leaving your hair looking shiny and healthy. Ions also help to split water molecules to smaller sizes, allowing them to easily penetrate hair, moisturising it inside and out.

### CERAMIC CONDITIONING

Besides, the dryer is equipped with ceramic coated outlet. The ceramic provides increased heat distribution, eliminating the damaging hot spots found with other dryers. When introduced to heat, ceramic is known to emit ion reflectives. Assisting in the breakdown of bacteria build-up, the reflectives enhance and renew the vitality of your hair. This dryer will give your hair a smooth, silky shine while eliminating frizz.

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

### SAFETY PRECAUTIONS

**WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. When using the unit, make sure the unit's air vent is not blocked. Make sure there is no hair or any other dirt obstructing the unit's rear filter.

5. This unit has been equipped with a temperature cut-out. If the unit overheats, it will shut off automatically or will stop heating. If this happens, slide the switch on the unit's handle into the OFF position, unplug the unit and allow it to cool for 10 minutes. BEFORE using it again, make sure there is no hair or any other dirt in the unit's rear filter. Plug the unit in and switch it on. If it overheats again, stop using it immediately, switch it off and unplug it. Return the unit to the VS SASSOON service centre.
6. Do not use the unit if it has fallen or if it appears to be damaged.
7. Do not leave the unit unattended when it is plugged in or switched on.
8. Unplug the unit immediately if you have problems when using it.
9. Do not use any accessories other than those recommended by manufacturer.
10. Unplug the unit after each use and before cleaning it.
11. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
12. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
13. Allow the unit to cool before storing.
14. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.

### INSTRUCTIONS FOR USE

#### The Ionic & Ceramic Conditioning Feature

Many aspects of modern living, including air conditioning, contact with man-made fibres and air pollution, add to a build-up of static electricity in the hair. Even brushing and towel drying the hair can cause static electricity. This static charge causes the scales on the cuticle of the hair to push each other apart, a result of which is that the surface of the cuticle itself is rough and hairs cannot lie smoothly against each other. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become "fly-away" and difficult to style. The Dual Ionic Port System produces double negative ions, provide a complete coverage, which act to neutralise the static charge, smoothening the scales on the hair cuticle for shiny, smooth and manageable hair. Ions also help to split water molecules to smaller sizes, allowing them to easily penetrate hair, moisturising it inside and out.

And the ceramic feature doubles the conditioning effect on hair by eliminating the damaging hot spots and assisting in the breakdown of bacteria build-up.

### SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

### DRYING BASICS

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through one section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid overdrying, do not concentrate heat on any one section for any length of time. Keep dryer moving as you style.
4. For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with Cool Setting feature to close hair shaft and lock in style.

### BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.

### STRAIGHTENING

Work with hair in sections when creating a super straight look. Using a large round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.


### MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.

### FEATURES:

1. **Power**  
1800 watts of drying power
2. **2 Heat / Speed Settings**  
for safe control of heat
3. **Cool Setting**  
locks style in place
4. **Concentrator**  
for precision styling
5. **Folding Handle**  
for easy storage
6. **Hinged Air Filter**  
for easy cleaning
7. **Dual Ionizing Function**  
to give healthier-looking, shining, more manageable hair
8. **Ceramic Coated Outlet**  
for better heat and more

### GET TO KNOW YOUR DRYER

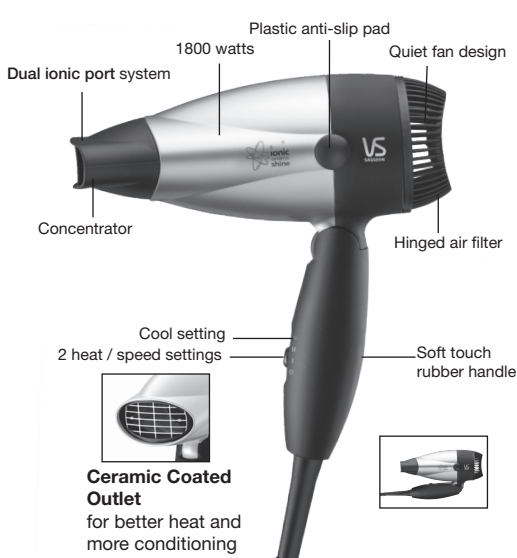

### USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. **Blocked or clogged air intake vents will cause the dryer to overheat.** When cleaning is needed, unplug the cord, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a damp cloth only. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the the heat cycles off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

### CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently. If the cord or dryer is damaged or does not operate properly, return it for repair to the VS Sassoon Service Centre. No repairs should be attempted by the consumer.

### STORAGE

When not in use, your dryer should be disconnected and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer.

### WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NETURAL  
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" .
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" .
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the ⊕ symbol.

With this appliance, if a 13 amp plug is used a 13 amp fuse should be fitted. If any other type of plug is used a 13 amp fuse must be fitted either in the plug or at the distribution board.

### LIMITED TWO YEAR WARRANTY

This styler can be repaired or replaced free of charge for 2 years from the date of purchase if the styler is defective in workmanship or materials. This warranty is no longer valid in case of alteration or repair by any unauthorised persons. To obtain service under this warranty, please keep the original purchase receipt for warranty service, and you can bring the styler to our customer service center for repair during the warranty period.

### OUT OF GUARANTEE

Call VS Sassoon Service Centre in your region as listed in this Instruction Booklet for details of repair service. Or email to us at email\_asia@conair.com with your name, contact telephone number and email address and details of the fault.

For more information, please visit



Before use, please obtain digital instruction manual by QR code to avoid losing paper manual and failing to obtain product information.