



Instruction Booklet 使用說明



Moistwrap Hair Dryer 等離子水膜護髮風筒

VSP-1200PIH

沙宣等離子水膜護髮風筒

重要安全指示

當使用電器時，尤其有兒童在場，應小心及遵守以下安全指示：

使用前請細閱使用說明 電器應遠離水源

安全預防措施

警告：請小心包裝或產品上使用的膠袋，請擺放在遠離兒童的位置。

請不要在嬰兒床、睡床、嬰兒車或兒童玩耍區內使用，因為膠袋的薄層有可能會堵住鼻子及口腔，阻礙呼吸。此膠袋不是玩具，敬請注意。

警告：不要在盛水的浴缸、淋浴、洗臉盆或其他器皿附近使用本器具。



以上符號表示“禁止在洗澡或沐浴時使用”

- 當風筒在浴室使用後，應立即拔除插頭，因為風筒接近水會導致危險，即使開關已關掉。為提供額外的安全性保護，建議閣下在提供浴室電源的電路中安置不超過30毫安培(mA)的漏電斷路器(RCD)；如有疑問，請向負責安裝的電機工程師查詢。
- 切勿把電器放入或掉進水或其它液體中。
- 如果電源軟線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
- 切勿堵塞電器的入風口，及放在柔軟表面上如床或沙發，因有機會堵塞入風口。請避免入風口受纖維、頭髮等碎屑堵塞。
- 這個產品已配備了溫度斷路器。如果設備過熱，它會自動關閉或停止加熱。如果發生這種情況，請把開關關閉及拔去電源，讓產品冷卻10分鐘。再次使用前，請確保沒有任何其他污垢或頭髮在後方過濾網上。插上插頭和開機。如果它再次過熱，應立即停止使用，關掉電源並拔下插頭。交回沙宣服務中心檢查及維修。
- 若電器曾跌落或有任何不妥，請馬上停止使用。
- 切勿將已接上電源或開啟的電器置之不理。
- 如若在使用中有任何不妥，請馬上拔去插頭。
- 請不要使用非本產品提供的任何配件。
- 每次用完後或清潔前請先拔去插頭。
- 切勿將電器發熱的部份碰到身體，尤其是眼睛、耳朵、面部和頸部。
- 在無成人監管的情況下，不建議兒童或殘疾人士獨自使用此電器。禁止兒童把此電器當作玩具把玩。
- 待電器冷卻之後才收藏。
- 為避免損壞電源軟線，收藏時切勿將電源軟線纏繞在電器上並確保其不被拉扯、扭曲或屈折。
- 使用前請先閱讀本使用說明中有關轉換電壓的資料。
- 請勿配合變壓器使用。

產品特點

- 本產品採用獨特的“等離子水膜科技”，同時釋放正、負離子，在髮絲上形成一層“等離子水膜”，可以滋養水潤秀髮。
- 獨特的“空氣氣流通道”，不僅可以將空氣中更多水分帶給頭髮，還可以在出風時配合主通道，形成“冷風包裹熱風”的模式，使出風直達髮絲，達到快速乾髮並且保護頭髮的效果。
- 恆溫護髮模式，保護頭髮減少高溫損傷。
- 採用1600瓦特專業髮廊級AC馬達，風力更強勁，使用壽命更長。
- 折疊手柄，方便收納。

認識您的等離子水膜護髮風筒



國際電壓說明

 
本產品為國際電壓設計，適用於120V和220-240V（50-60Hz）的交流電壓下工作。產品出廠時電壓調節器為220-240V，如需要調至120V，請使用一字螺絲刀將調節器的箭頭向左轉動調至120V，然後配合合適的插座即可開始使用。

注意：

- 請務必在電壓調節完畢後再插電源，否則電壓不當會導致產品損壞。
- 電壓調節工具只能使用一字螺絲刀，請勿使用其他工具否則會對產品造成損壞。

使用方法 提示

- 在使用風筒時，請確保出風口和頭髮之間保持30毫米以上的距離，否則可能導致頭皮灼傷。
- 在使用風筒時，請確保入風口和頭髮之間保持100毫米以上的距離，否則可能導致頭髮被吸入風筒，從而導致損傷。



- 本產品僅可用作吹乾頭髮和頭髮造型用途，請勿用來給寵物使用或用來吹乾鞋子衣物等，否則可能導致燙傷或火災。
- 請勿對嬰兒使用，否則可能導致燙傷。
- 使用過程中，出風口和造型集風嘴區域溫度會很高，請勿用手或身體觸摸此區域，否則可能導致燙傷。
- 展開或折疊手柄時，請勿接觸手柄折疊縫隙部分（如下圖圓圈部分所示），否則會夾到手指導致受傷。

- 使用時請勿直視或面對出風口，否則吹出的風高溫且可能帶有灰塵等異物，導致受傷。
- 本產品內置正負離子發生裝置，使用時會發出輕微的噼啪聲，此為正常現象，請放心使用。
- 避免過度乾燥，不要長時間集中對著一處頭髮吹熱風。應當一邊吹風，一邊移動機身。如想使氣流更加集中，可以使用集風器配件。
- 如果您想在沒有洗頭的情況下快速潤色髮型，可以在頭髮上噴灑一些水，潤濕頭髮，然後再使用風筒吹出造型。
- 當您在使用風筒打造彎曲和波浪造型時，先用較高的溫度將頭髮吹至接近全乾狀態，然後用冷風功能快速接近髮根，鎖定造型。

開始使用

- 先用毛巾將頭髮上的水擦至不滴水的程度。
 - 用髮梳或手指疏通一下頭髮至不纏繞或打結的程度。
 - 在使用風筒之前，請先確認電源開關設定在0檔位置，然後插入電源插頭。插入電源前，請務必按照“國際電壓說明”先檢查、調節電壓再接通電源，避免錯誤電壓導致產品損壞。
 - 選擇合適的模式進行吹髮。
- 注意：風筒在剛剛開機時可能會發出輕微異味，此屬於正常情況，不會影響使用。

塑造豐盈質感

要增加髮型豐盈感，低頭並將風筒熱風吹向髮根以增加髮根彈力。吹乾秀髮後，將秀髮撥向後面再梳理。



吹塑亮麗直髮

將秀髮分為數份，用大圓捲髮梳（大約直徑2吋）拉緊每份秀髮，並將髮尾向內捲吹塑。



吹塑波浪髮型

如需吹塑自然波浪髮型，低頭讓秀髮自然向下垂，將集風嘴取下，抓住髮尾，用手指彎曲秀髮塑造曲髮形狀，吹乾秀髮後，將秀髮撥至原本的位置即可。



產品保養須知

為保證產品正常的使用，請按照以下方式保養

- 任何清潔、檢查、收納動作，請務必保證產品已經切斷電源並且產品溫度已冷卻的情況下進行，否則容易燙傷。
- 請勿使用任何潤滑劑或其他保養產品塗抹產品表面。
- 只可用微濕的毛巾擦拭產品表面，請勿使用任何清潔劑清潔產品表面（如酒精、去光水或洗滌劑等），否則會導致產品褪色、破裂或故障。

- 如需清潔，拔去插頭，用小刷子或吸塵器吸走入風口的灰塵和頭髮。
- 使用完畢收納本產品時，如果仍有護髮產品或化妝品殘留在手柄或機身上，可能會導致塑膠老化或導致褪色、故障和破裂。
- 請勿拉扯、扭曲或過度彎曲電源線，請勿將電源線纏繞再機身上，否則容易造成產品損壞或短路。
- 如發現任何異常現象或產品破損，請立即切斷電源插頭並等待機身降溫完畢後，聯繫並授權沙宣維修中心修理。切勿自行拆卸維修本產品。
- 以上保養須知不包括因長期使用而導致的表面損傷及一切因為錯誤使用、不依照使用說明造成的產品損傷、遺失零件及自行拆卸造成的產品問題。

產品參數

電壓	120V / 220-240V 50-60Hz
功率	1500W / 1300-1600W
產品尺寸	159.8(長) X 281.9(高) X 80.6(闊)毫米

保養

本產品無需保養，亦無需使用潤滑劑。請避免讓污物或塵埃堵塞器具上的孔。如需清潔機身，請先拔掉電源插頭並待機身降溫，然後用布塊擦拭機身外表。如發生任何異常現象，請立即拔出電源插頭並待機身降溫，然後交給授權沙宣維修中心修理。用戶切勿自行維修本造型器。

小心

切勿拉扯、扭曲或過度彎曲電線。切勿將電線纏繞在機身上，否則容易損壞接入機身的可轉動部位，導致電線破裂或短路。如發現造型器破損、停止或間歇性停止操作，請立即停用。

收存

不使用本產品時，可待機身降溫後，將其收存於安全、乾燥及遠離兒童的地方。切勿以拉扯電線的方式拔出插頭；切勿將電線纏繞在機身上。要確保電線的接入機身部分垂直，其餘部分自然放置即可。

電線系統

總電線的顏色分別根據其性質而定：

- 藍色代表中線
- 啡色代表火線

由於電器的總電線顏色和插頭的電路接頭顏色可能不相符，故如要拆除插頭，必須依照以下重新裝配操作說明：

- 藍色的電線應和電路接頭“N”接駁。
- 啡色的電線應和電路接頭“L”接駁。
- 切勿將以上任何一條電線接駁在電路接頭的地線“E”或⊕插頭上。

此電器使用十三安培電插頭時，請採用三安培的保險絲。若使用其他電插頭，請採用三安培的保險絲。

兩年保養期限

在您購買日期起兩年內，並在正常情況下，如產品的品質或零件有任何不妥之處，沙宣顧客服務中心將會為您免費提供維修或換貨服務。如需獲得此保用服務，只需保留正本收據，倘若產品於保養

期內有任何問題，可蒞臨您所在地區的顧客服務中心處理。注意：是項保養不包括一切因錯誤使用、不依指示處理產品及意外損毀、遺失零件及經自行改造的產品。

保用期之後

請致電使用說明中所列出的您所在地區的沙宣顧客服務中心，查詢維修服務詳情，或是電郵至email_asia@conair.com，附上您的名字，電話號碼和電郵地址，還有產品不妥善之詳情。

如欲了解更多，請登入




通過此二維碼也可獲取電子說明書

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	09/12/2019
Customer	VS-HK
Model No.	VSP-1200PICN
Description	IB
Job No.	19VS122
Reference No.	IB-19/361
Revision No.	0
Color	1C + 1C (Black)
Open Size	644mm(W) x 214mm(H)
Folded Size	92(W) x 214(H) / mm
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Jimmy Ng
Designer	Carlos Ho
Vendor	SilverPlan
Supplier	

折疊方法
Folding method:
16 pages (7 x 2)

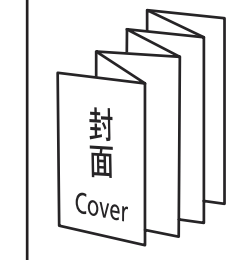

VS MOISTWRAP HAIR DRYER

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

- WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



The above symbol means "Not to be used in bath or shower"

- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
- Never immerse the unit in water or any other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- When using the unit, make sure the unit's air vent is not blocked. Make sure there is no hair or any other dirt obstructing the unit's rear filter.
- This unit has been equipped with a temperature cut-out. If the unit overheats, it will shut off automatically or will stop heating. If this happens, slide the switch on the unit's handle into the OFF position, unplug the unit and allow it to cool for 10 minutes. BEFORE using it again, make sure there is no hair or any other dirt in the unit's rear filter. Plug the unit in and switch it on. If it overheats again, stop using it immediately, switch it off and unplug it. Return the unit to the VS SASSOON service centre.
- Do not use the unit if it has fallen or if it appears to be damaged.
- Do not leave the unit unattended when it is plugged in or switched on.
- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by manufacturer.
- Unplug the unit after each use and before cleaning it.
- Avoid any contact between the unit's hot surfaces and your

skin, in particular, your ears, eyes, face and neck.

- This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
- Allow the unit to cool before storing.
- To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
- Before plugging in, read the information about voltage adjustment contained in the operating instructions section of this manual.
- Do not use with a voltage converter.

FEATURES

- Moistwrap technology of this product can release positive and negative ion at the same time, make hair more moist.
- Unique "Air Attraction Channel" will bring more moisture to hair and can form a "cool air wraps hot air" with main air channel which achieves fast dry result and protect hair.
- Consistent temperature mode, protect hair from high temperature damage.
- Professional 1600W AC motor, longer using life, more powerful.
- Foldable handle, easy for storage.

GET TO KNOW YOUR MOISTWRAP HAIR DRYER



INTERNATIONAL VOTALGE

The voltage of this product is International votalge which can be used under alternating voltage of 120V or 220-240V (50-60Hz). Default status of voltage of this dryer is 220-240V, if you need to adjust it to 120V, please use slot type screwdriver to adjust the switch to left for 120V, and make it work with correct socket if necessary.

NOTE

- Please make sure you adjust voltage first then make plug in or product will be damaged due to wrong working voltage.
- Please only use slot type screwdriver to adjust voltage and please don't use other tools or product will be damaged.

USE INSTRUCTIONS TIPS

- Please make sure the distance between your hair and air outlet of dryer is at least 3cm when using, or scalp may be burnt.
- Please make sure the distance between your hair and air inlet of dryer is at least 10cm or hair may be absorbed into the dryer to cause damage.
- This product only can be used for hair drying and hair styling. Please don't use it for other purpose, like pet using or dry your cloth, etc. or will cause damage or fire.
- Please don't use it on baby otherwise will cause burn.
- Please don't touch concentrator area as high temperature when dryer working or will cause damage.
- When stretching or folding the handle, please don't keep your finger away from connected gap area (as picture in below) or will cause finger clipped or damage.



- Please don't look at or face the air outlet when using or will cause damage by the high temperature and dust.
- You will also notice that the unit sputters slightly, this sound is normal for a high output ion generator.
- To avoid over-drying, do not concentrate heat on any one section for an extended length of time. Keep dryer moving as you style. For pinpoint airflow, use the snap-on concentrator attachment.
- For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.
- When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with cold shot feature to quickly close hair shaft and lock in style.

BEGIN TO USE

- Please wipe hair by **towel** until water doesn't drop.
- Please use brush or finger to make hair smooth without enwind or knot.

- Please make sure the dryer has been adjusted on 0 mode and then insert the plug. Please check and adjust working voltage firstly according to "International Voltage" using guideline then make plug in or product will be damaged due to wrong working voltage.
- Select appropriate mode for hair drying.

Attention: It is normal if slight peculiar smell come out from dryer at the early stage you power on, it will not influence your using.

BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.



STRAIGHTENING

Work with hair in sections when creating a super-straight look. Using a large round brush (approximately 2" diameter), hold hair taut in each section and bend ends slightly under as you dry.



MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying. **For curlier, wavier hair use the diffuser attachment.**



PRODUCT MAINTAIN

Please maintain product according to below tips:

- Please make sure all checking, cleaning or storage will be done after power cutting and product cool down, or **wil** cause damage.
- Please don't smear any lube or other maintain product on product's surface.
- Only can use **towel** to clean the surface of product, please don't use any cleaning liquid like alcohol, nail polish remover or other cleaner, or will cause color fading, malfunction or damage.
-
- Please make sure there is no hair protection product or cosmetic left on handle or body of product after using, or will cause plastic aging, color fading, malfunction or damage.
- Please don't pull, warp or overbending on power line, please don't twine the power line on product body or will cause damage or malfunction.
- If any abnormal or product damage, please cut power immediately and wait until product cool down, then contact VS after-sales center. Please don't disassemble product by yourself.
- This warranty is no longer valid in case of alteration or repair by any unauthorised persons. **To obtain service under this warranty, please send in registration within one month of purchase through either one of the following ways.**

PRODUCT SPECIFICATION

Voltage	120V / 220-240V 50-60Hz
Wattage	1500W / 1300-1600W
Product dimension	159.8(L) X 281.9(H) X 80.6(W)mm

USER MAINTENANCE

Your styler is virtually maintenance-free. No lubrication is needed. If cleaning becomes necessary, disconnect the appliance from the power source and wipe exterior with a cloth. If any abnormal condition occurs, unplug the appliance, allow it to cool and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance should be disconnected, allowed to cool and stored in a safe, dry location out of reach of children. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter 'N'.
 - The wire which is coloured BROWN must be connected to the terminal which is marked with the letter 'L'.
 - Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the ⊕ symbol.
- With this appliance, if a 13 amp plug is used a 3 amp fuse should be fitted. If any other type of plug is used a 3 amp fuse must be fitted either in the plug or at the distribution board.

LIMITED TWO YEAR WARRANTY

This styler can be repaired or replaced free of charge for 2 years from the date of purchase if the styler is defective in workmanship or materials. This warranty is no longer valid in case of alteration or repair by any unauthorised persons. To obtain service under this warranty, please keep the original purchase receipt for warranty

service, and you can bring the styler to our customer service center for repair during the warranty period.

OUT OF GUARANTEE

Call VS Sassoon Service Centre in your region as listed in this Instruction Booklet for details of repair service. Or email to us at email_asia@conair.com with your name, contact telephone number and email address and details of the fault.

For more information, please visit



You can also obtain digital instruction manual by QR code.

VS SASSOON SERVICE CENTRE

Manufacturer: Conair Far East Ltd
Address: 35/F., Standard Chartered Tower, Millennium City,
388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong.
Tel: (852) 2751 4604

沙宣顧客服務中心

製造商：美康雅達東有限公司
地址：香港九龍觀塘觀塘道388號創紀之城渣打中心35樓
電話：(852) 2751 4604

www.toolsfossassoon.com

SOLE DISTRIBUTED BY:

經銷商:

Philippines 菲律賓
Rustan Marketing Corporation
3rd Floor, 403 Midland Building,
Senator Gil Puyat Ave., Makati City, Philippines
Tel: (632) 890 9703 Fax: (632) 890 4838

Malaysia 馬來西亞
Innovest Marketing Sdn. Bhd.
Lot 2208, Jalan Kusta, Kampung Jaya Industrial Area,
47000 Sungai Buloh, Selangor D.E., Malaysia
Tel: 603 6141 3598

Singapore 新加坡
Massmark International Pte Ltd
80 Genting Lane #08-01/05
("Drive in through 35 Tannery Road)
Ruby Industrial Complex, Genting Block
Singapore 349565
Tel : 65-6747 1102 Fax : 65-6747 8997

Indonesia 印尼
PT. Autoaccindo Jaya
JL.Cideng Barat No.7,
Jakarta 10140, Indonesia
Phone: + 6221 6332730
Fax: + 6221 6322886

Certain trademarks used under license from The Procter & Gamble Company or its affiliates.
維達沙宣及其有關標誌乃寶潔有限公司擁有，授權予美商美康雅公司及其關係企業使用。